
### F350 VO hand-wheel Slicer

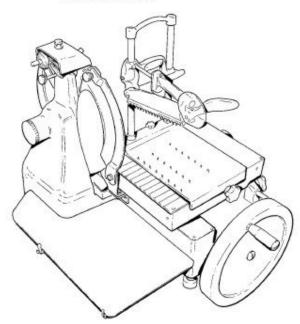

Use and Maintenance


03-05

#### Technical features

Blade diameter	350 mm
Cutting thickness	0÷2,5 mm
Actual cut:	
-Length	270 mm
-Height	240 mm
Tray run	


#### **Maximum Dimensions**

(in mm)

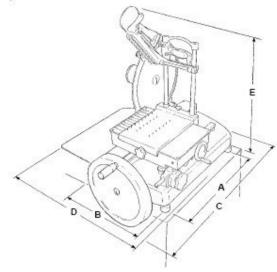


#### Dimensions and weight

-A	600 mm
-B	510 mm
-C	870 mm
-D	710 mm
-E	650 mm
Weight	81 kg

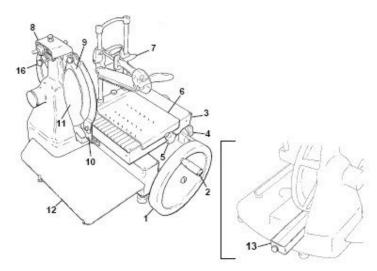

- Hand wheel
   Handle
   Trolley
   Slice thickness, graduated knob

- knob
  5. Plate, quick forward
  6. Goods-holder tray
  7. Presser
  8. Sharpener
  9. Blade
  10. Blade protector
  11. Slice protector
  12. Collection plate
  13. Waste collection tray
  14. Plate slow forward
  15. Plate locking knob
  16. Sharpener locking knob

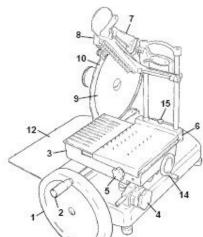


# 3-6-6-1

#### Use

Rotate the 1 hand wheel, and bring the 3 trolley closer o the operator. Lift the 7 goods-presser.

 Rotate the 5 knob clockwise and simultaneously move the 6 goodsholder tray to the right.






Rotate the 5 knob clockwise and simultaneously move the 6 tray to the left, thus bringing the product close to the 9 blade.

The goods can be more precisely obrought close or away from the blade using the 14 knob.

Set the required slice thickness or the 4 graduated (0÷2,5 mm) knob

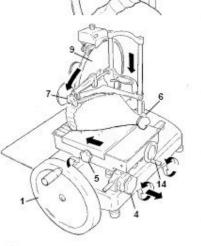

Before proceeding with slicing the product, remove the 10 blade protector by loosening the 10.1 knob and move it from idle position (A) to work position (B), thus uncovering the blade cutting edge.

Lock the 10 blade protection in the new setting by screwing the 10.1 knob again.

#### WARNING

Always use protective, cutresistant, gripping gloves and proceed with the utmost care and attention.

#### CUTTING HAZARD!

Rotate the 1 hand wheel and start the slicing operation; the slices will fall onto the 12 plate. Once completed slicing, return the 10 blade protection to idle position (A)

WHEN THE MACHINE IS NOT IN USE, ALWAYS COVER THE BLADE!


#### Cleaning


For all cleaning operations, always and exclusively use a water-moist cloth and a standard, dishwashing detergent.

Warning: always wear cutresistant, gripping gloves and carry out the operations described with the utmost care and attention.

#### CUTTING HAZARD!


Rotate the 1 hand wheel and bring the 3 trolley towards the operator. Rotate the 5 knob clockwise and simultaneously move the 6 goodsholder plate to the right Remove the goods from the 6 tray. Unscrew the 15 locking knob as in the illustration.

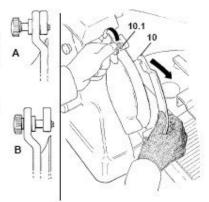


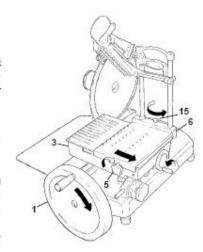


Lift the 6 goods-holder tray. Carefully clean its underside and the 3 trolley surface.


Very carefully clean the 9 blade as illustrated, starting from the centre and towards the outside.

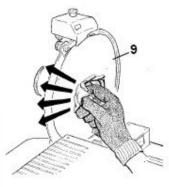

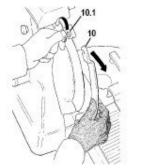


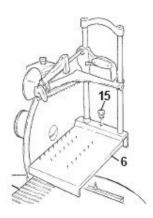

Open the 11 slice-protection and carefully clean the inside.

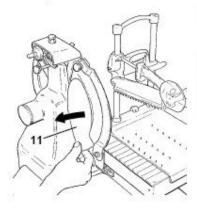

Loosen the locking 10.1 knob to remove the 10 blade-protector. WARNING: Cutting hazard! Once completed cleaning, reassemble the blade-protector.

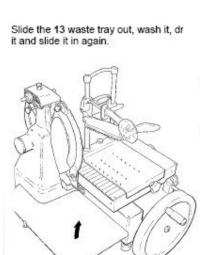

## 13


Loosen the two fastening screws and remove the 12 tray.


#### Blade sharpening

Loosen the 16 locking knob on the 8 sharpener.

Lift the sharpener and rotate it at 180°.

12

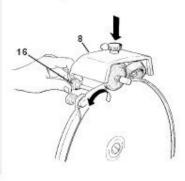

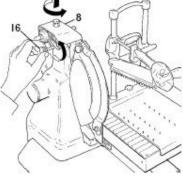


Carefully, lower the 8 sharpener again; the blade will automatically centre between the two sharpening grinders.

Lock the 16 knob again.

Set the hand wheel in motion and simultaneously press the 8.1 knob, only for 30-40 seconds.

Stop rotation and use a pencil to check that the blade cutting edge has made a slight burr. Set the hand wheel in rotation again and simultaneously press the 8.2 knob only for 2-3 seconds.

Return the blade sharpener to its original position.

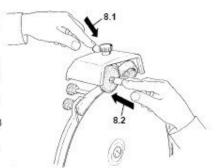

#### Lubrication

One or two oil drops in the points highlighted in the illustration.

Use only the oil supplied. After lubrication, thoroughly remove any possible excess oil.

